

DeckStep Hot Tub Steps

(2400mm All Board Types)



Component List

2 x Side Cladding	Std Deck Board (120mm x 28mm)	217mm	(A)
2 x Side Cladding	Std Deck Board (120mm x 28mm)	462mm	(B)
2 x Side Cladding	Std Deck Board (120mm x 28mm)	707mm	(C)
4 x Inner Side Framing	Joist (45mm x 45mm)	365mm	(D)
2 x Inner Side Framing	Joist (45mm x 45mm)	245mm	(E)
2 x Inner Side Framing	Joist (45mm x 45mm)	120mm	(F)
2 x Central Support Framing	Joist (150mm x 45mm)	365mm	(G)
2 x Central Support Framing	Joist (150mm x 45mm)	245mm	(H)
2 x Central Support Framing	Joist (150mm x 45mm)	120mm	(I)
3 x Rise Boards	Std Deck Board (120mm x 28mm)	2400mm	(J)
6 x Tread Boards	**Product Specific**	2400mm	(K)
108 x 60mm Green Coated Screws			(FIX 1)



Recommended Tools

Drill Driver
Pilot Hole Drill Bit
PZ2 Driver Bit
Tape Measure

Two people are recommended to safely assemble these steps.

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 1 of 6

DeckStep Hot Tub Steps

(2400mm All Board Types)




Step 1

To prevent splits, drill a pilot hole before driving screws

To begin the build, first the two cladded sides must be made, see below diagrams for reference.

Each side will require 18 x 60mm Coated Green Screws (**FIX 1**) to fix all the parts together, see X on the diagram for screw placement, these will drive through the joist parts (**D**), (**E**) and (**F**) and into the backside of the boards (**A**), (**B**) and (**C**).

Please Note: The castle top profiled side of the board should be facing down / outwards.

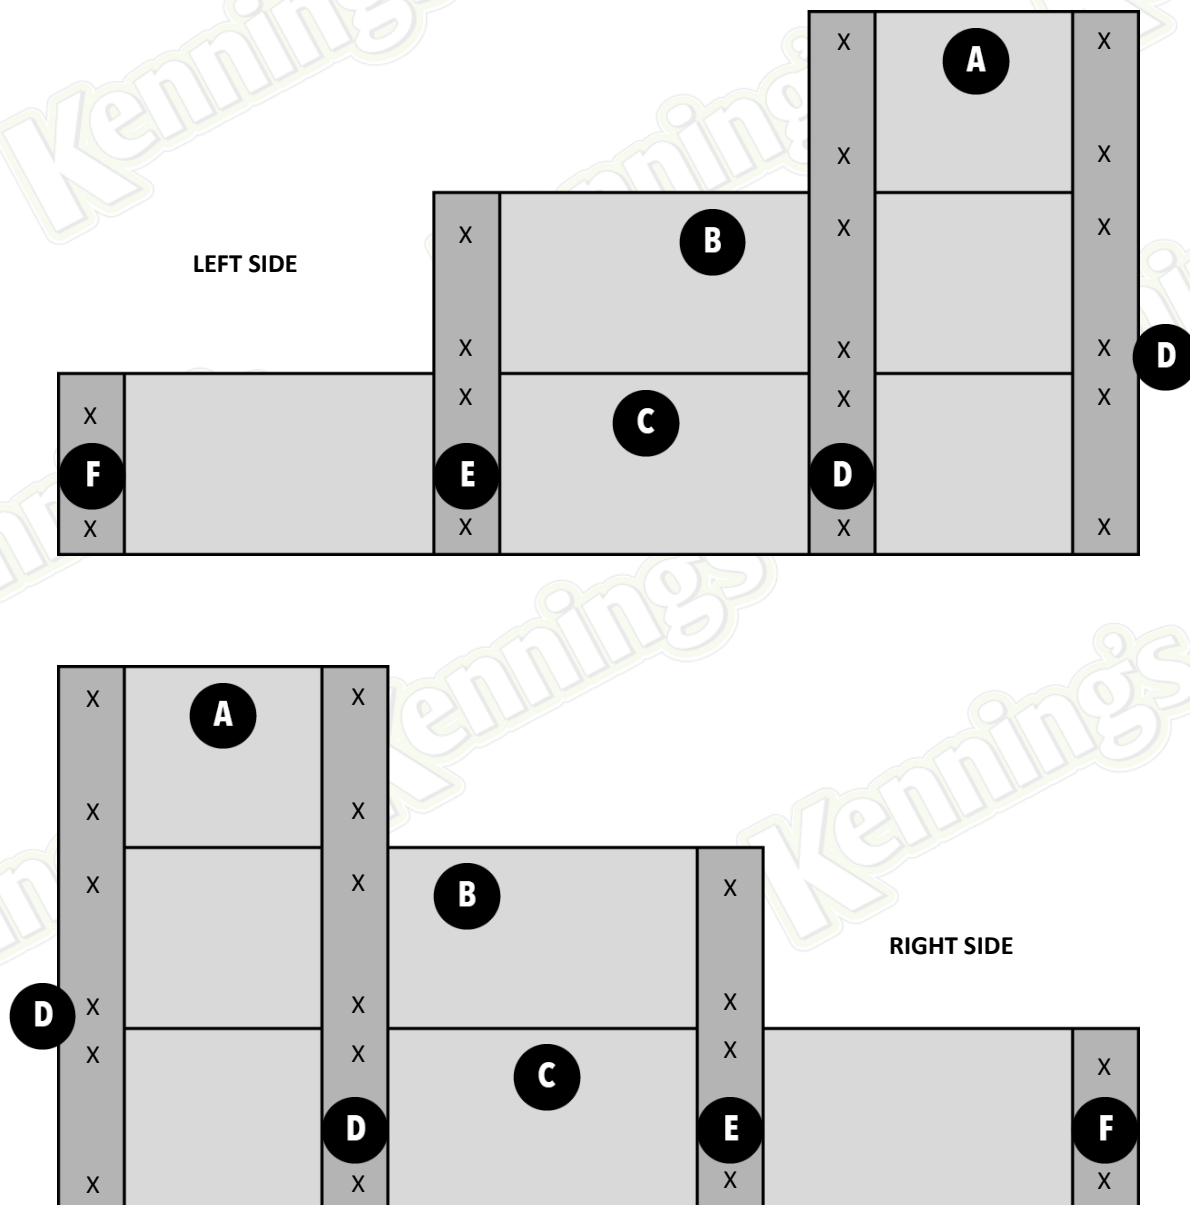

DeckStep Hot Tub Steps

(2400mm All Board Types)




Step 2

To prevent splits, drill a pilot hole before driving screws

With the two sides pieces of the steps made, these can now be joined together using the 3 x Rise Boards (J).

These boards attach at both ends to the 3 x Inner Side Framing joists (D), (E) and (F) using 2 x 60mm Coated Green Screws (FIX 1) at each end as shown in the diagram below.

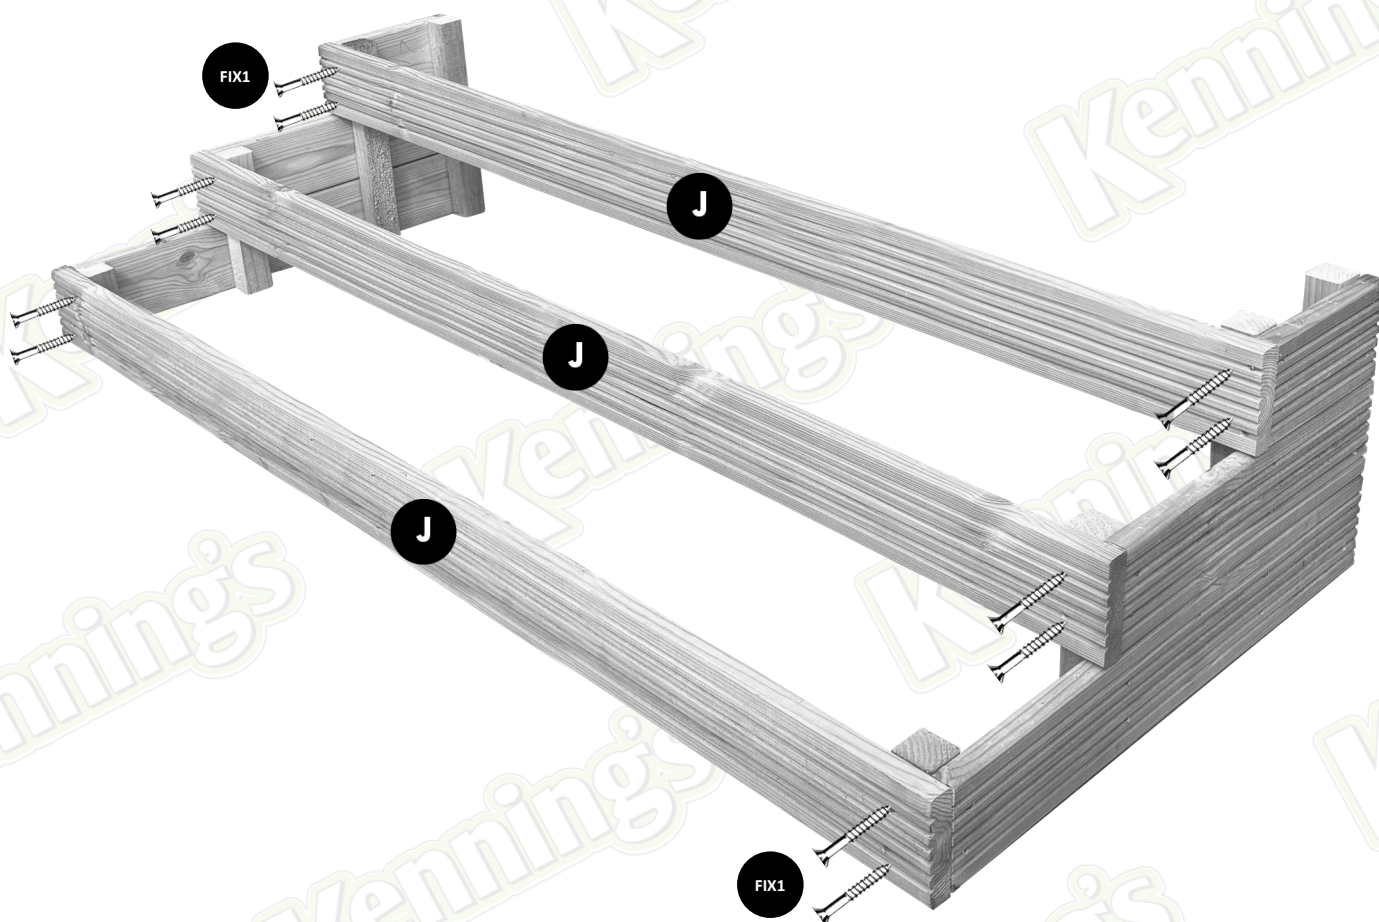

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 3 of 6

DeckStep Hot Tub Steps (2400mm All Board Types)




Step 3

To prevent splits, drill a pilot hole before driving screws

The last part of the framing is to add the 2 x sets of central supports.

Using a tape measure, measure 800mm in from either end to find the correct position for the 3 x Central Support Framing joists (**G**), (**H**) and (**I**).

Fix the supports into place using 2 x 60mm Coated Green Screws (**FIX 1**) driving through the Rise Boards and into the joist as shown in the diagram below.

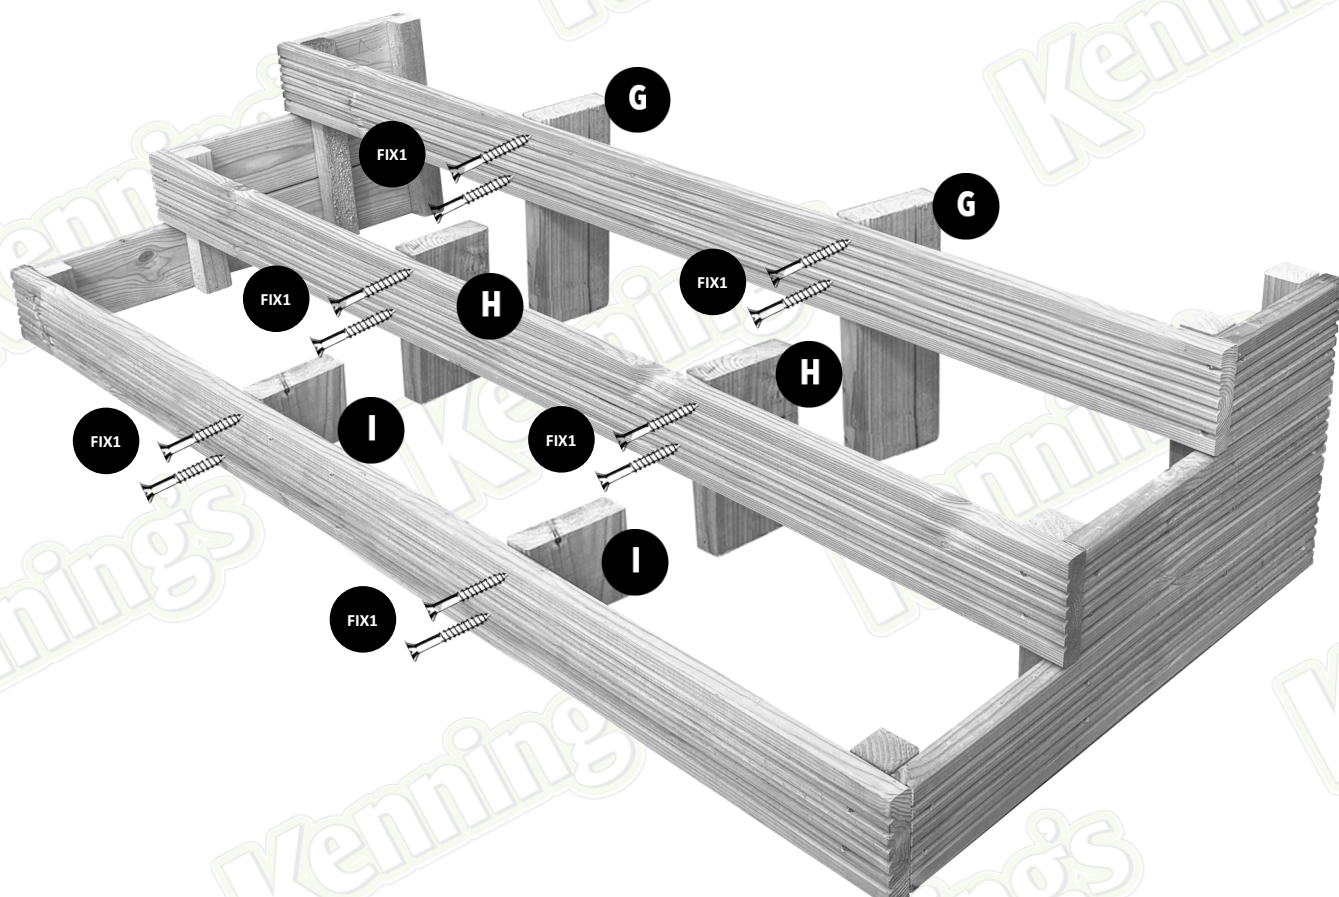

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 4 of 6

DeckStep Hot Tub Steps (2400mm All Board Types)




Step 4

To prevent splits, drill a pilot hole before driving screws

To finish your DeckStep build, the last thing to do is to attach the 6 x Tread Boards (**K**).

The Treat Boards are simply fixed into place using 2 x 60mm Coated Green Screws (**FIX 1**) at each end of each board and two into the middle support as shown in the diagram below.

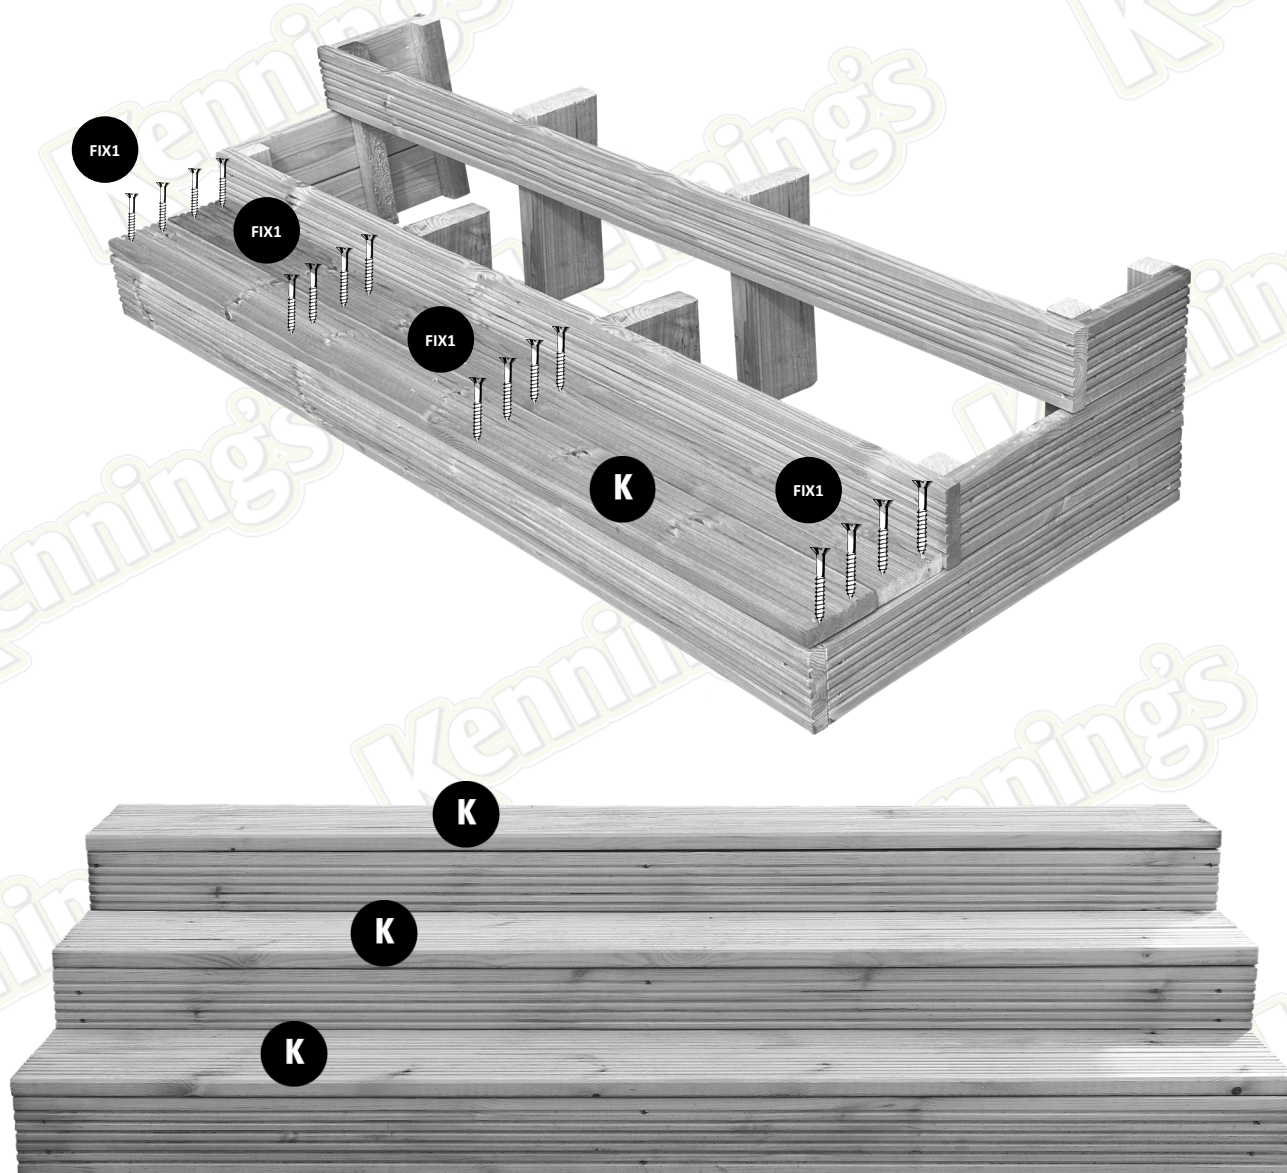

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 5 of 6

DeckStep Hot Tub Steps

(2400mm All Board Types)

Kennings



Enjoy your new DeckStep Hot Tub Steps!

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 6 of 6