

Tuscany Railing Kit System

Fitting Instructions



Component List

Tuscany Balustrade Spindle (each) x 15

Drilled Balustrade railing 1800mm x 2

Fixing Bracket (pair) x 2

Tools Required:

Drill driver

Pencil

Tape measure

Spirit level



All images are for illustration only. Please see individual item listings for actual item specifications.

Page 1 of 2

Tuscany Railing Kit System

Fitting Instructions

Kennings

1




INSTALL THE NEWEL POSTS.

Set newel posts (sold separately) to accommodate pre-drilled rail length.

Centre pre-drilled rail between newel posts and trim equal amounts from each end of top and bottom rails if required.



2

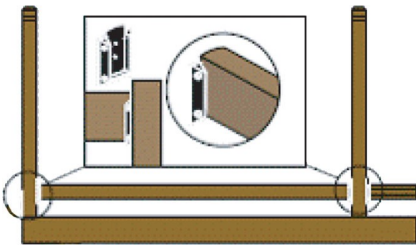

INSTALL THE BOTTOM RAILS.


Slide the rail hanger bracket over the end of the rail and attach with screws through the end of the rail. The opening of the bracket must always be up.



Rail Hanger Bracket



3

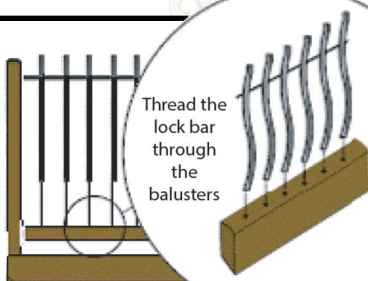


INSTALL THE BALUSTERS

With high quality adhesive (sold separately), fill all the holes half way. Insert balusters into the pre-drilled holes in the rail. This will bond the wood to the balusters. Then thread the lock bar through the balusters to keep straight.



4

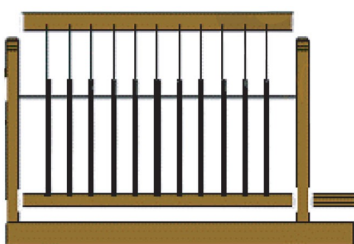

INSTALL THE PRE-DRILLED TOP RAIL

Attach the pre-drilled top rail to the top of the balusters. Making sure you line up the balusters to the holes in the top rail.

Fasten the railing section to the newel posts with the hanger bracket provided.