

Zen Pergola

(W 3600mm x H 2350mm)

Kennings

Component List

5 x	Curved Beams	(A)
4 x	Horizontal Beams	(B)
1 x	Centre Block	(C)
1 x	Decorative Finial	(D)
28 x	100mm Frame Screws	(FIX 1)



Recommended Tools

Drill Driver

PZ2 Driver Bit

Pencil


Step Ladder

A minimum of three people are recommended to safely assemble this pergola.

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 1 of 7

Centre Block Template

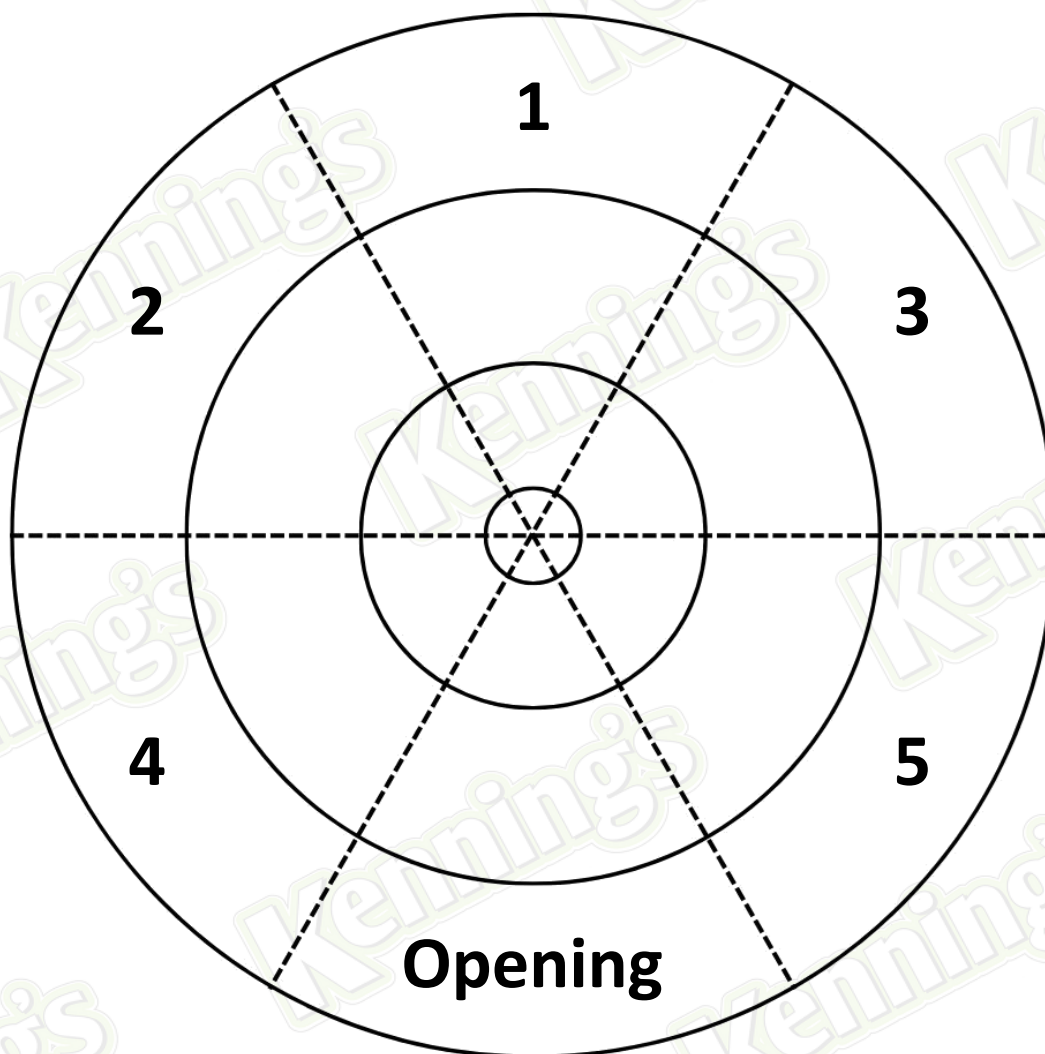

The above template is designed to help you mark up your timber accurately when printed on A4 paper.

This template serves as a guide, showing the precise locations where components should be fixed in place.

Place the template on your timber, mark the key points, and follow the guidance for correct positioning during installation.

Zen Pergola

(W 3600mm x H 2350mm)


Kennings

Step 1

To prevent splits, drill a pilot hole before driving screws


The first thing that you need to do before attaching any timber is to mark up the Centre Block **(C)** using the template we have provided on page 2 of these instructions.

With the centre block marked up you will now have a guide as to where the 5 x Curved Beams **(A)** will be attached to keep them equally spaced.

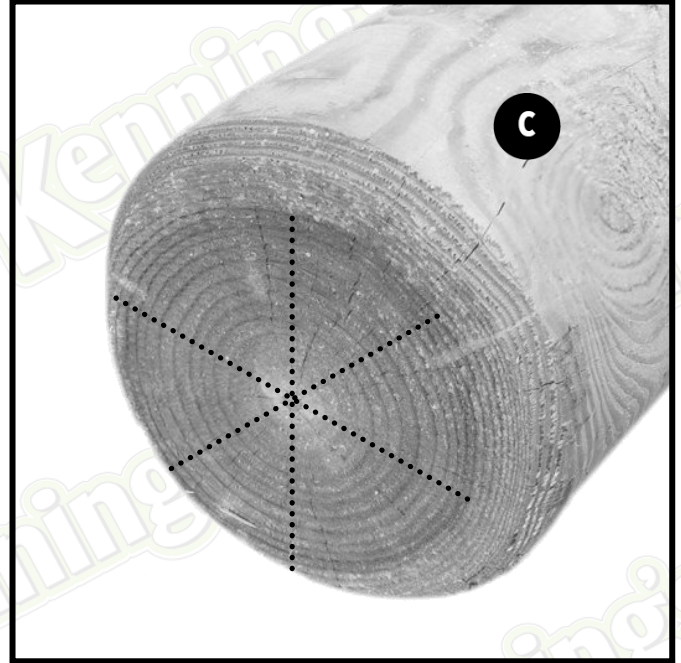

Step 2

The next thing to do is to attach the Decorative Finial **(D)** to the Centre Block **(C)** using 2 x 100mm Frame Screws **(FIX 1)** driving through the base of the finial and into the top of the centre block.

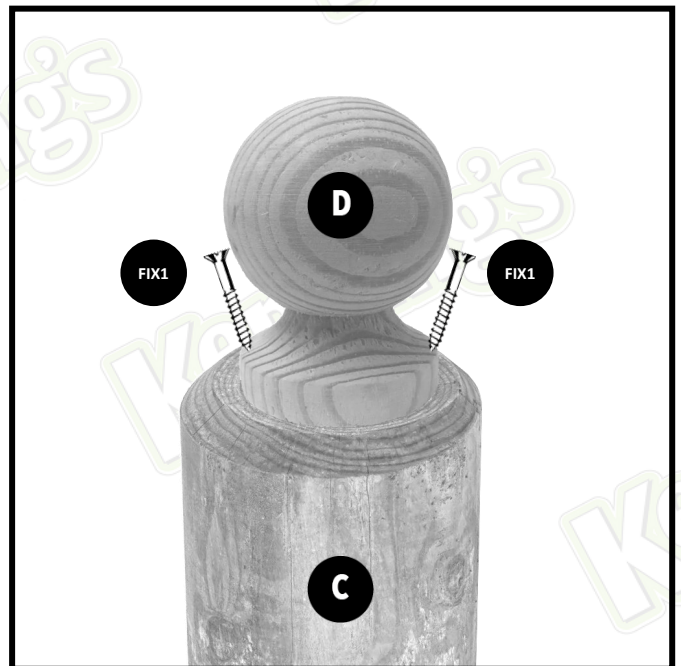

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 3 of 7

Zen Pergola (W 3600mm x H 2350mm)


Kenning's

Step 3

To prevent splits, drill a pilot hole before driving screws

To make the build as easy as possible, we recommend fixing 2 x opposing Curved Beams (**A**) to the Centre Block (**D**) whilst you have them at ground level.

The Curved Beams (**A**) are to be attached using 2 x 100mm Frame Screws (**FIX 1**) driving through the back of the timber of the curved beam and into the Centre Block (**D**), one screw should be fixed in from the top and one from the underside, driven in on an angle.

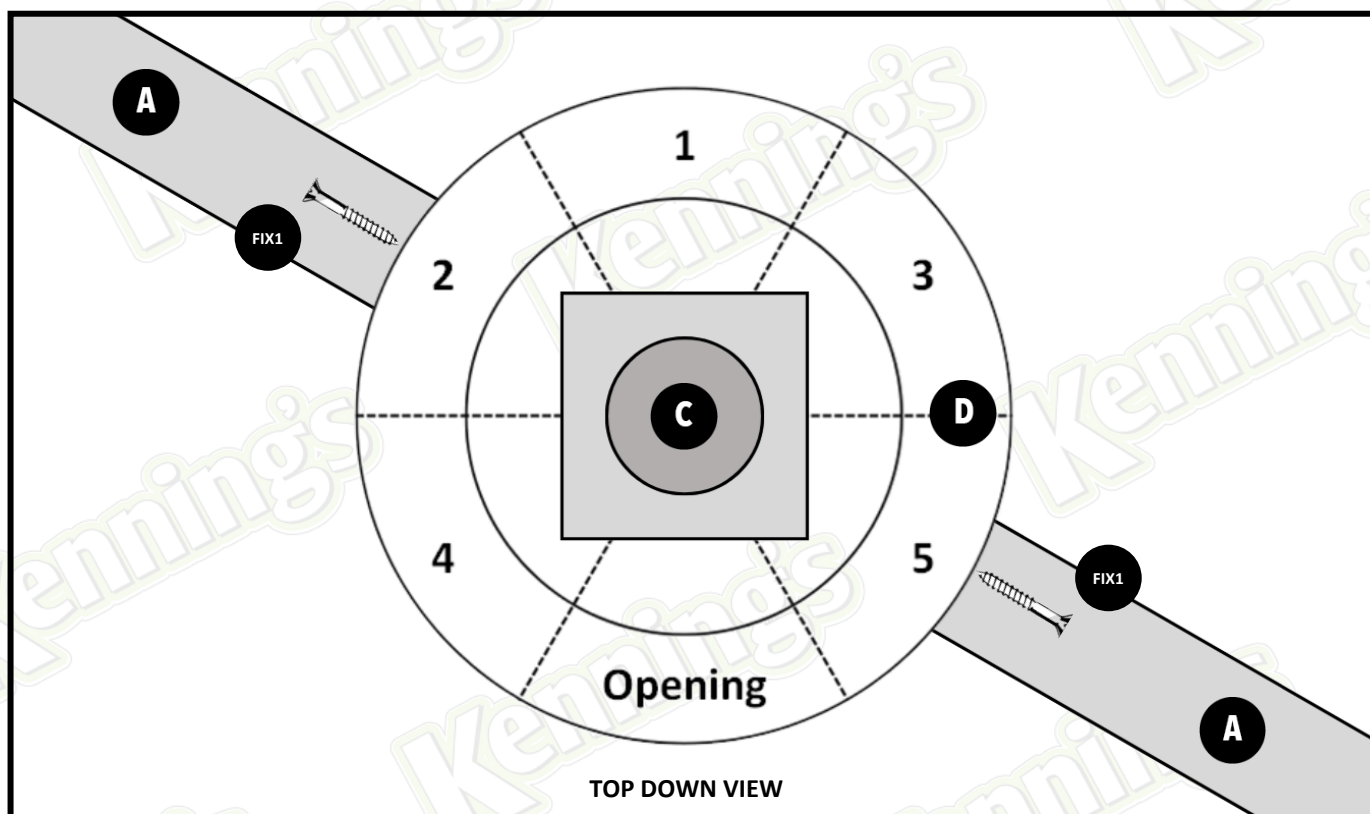

Zen Pergola (W 3600mm x H 2350mm)

Kennings's


Step 4

To prevent splits, drill a pilot hole before driving screws

With the first two Curved Beams (A) attached, the remaining three can now be attached in the same way using 2 x 100mm Frame Screws (FIX 1).

With the help of two people, the parts that you fastened together in Step 3 can be lifted and stood up straight allowing you to position the other legs and attach them to the Centre Block (C).

Note: If you attach the leg opposite the opening first, this will help the pergola stand up on its own, caution should still be taken until all five legs are in place.

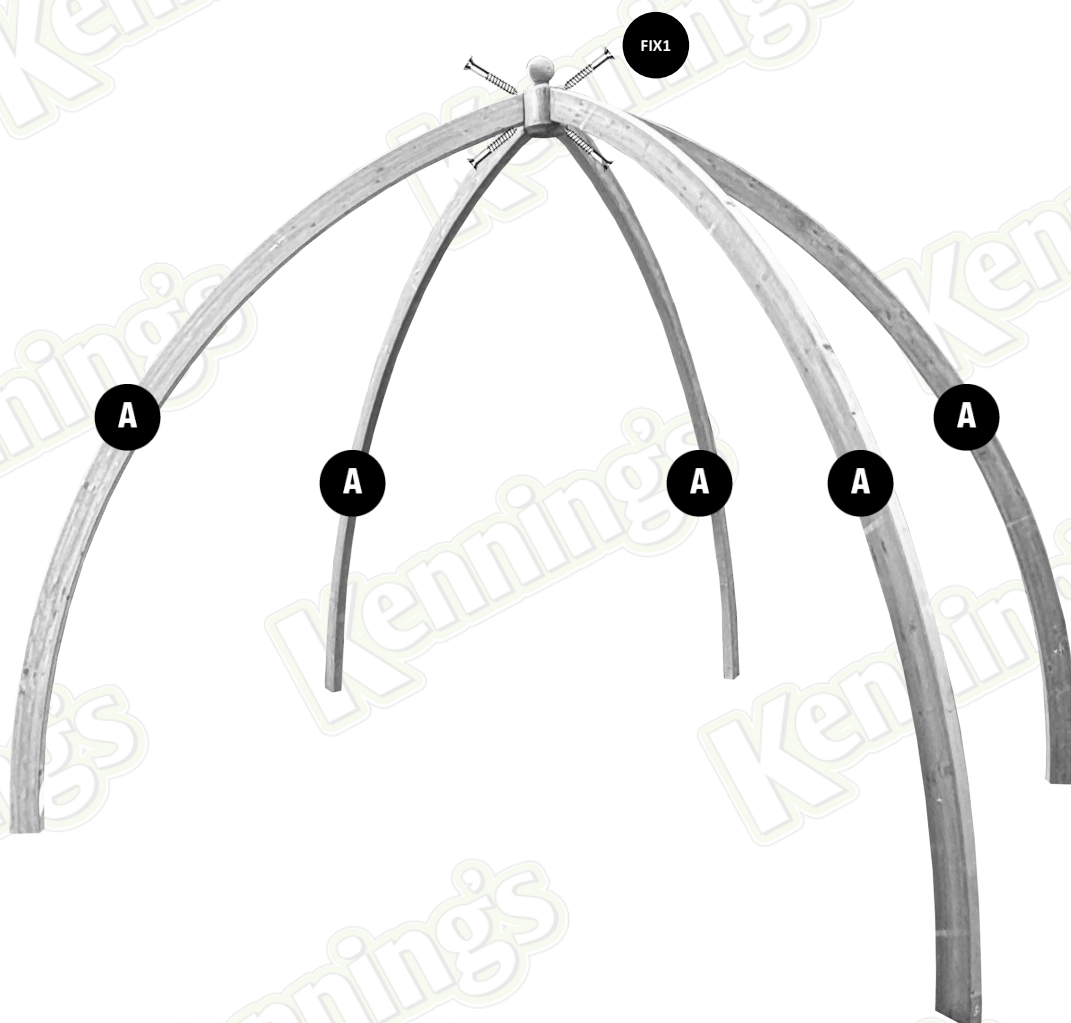

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 5 of 7

Zen Pergola (W 3600mm x H 2350mm)

Kennings's


Step 5

To prevent splits, drill a pilot hole before driving screws

With all the curved beams now securely fastened into place the only thing to do now is to attach the 4 x Horizontal Beams (B) which add strength and rigidity as well as helping the legs be evenly spaced.

The horizontal beams should be fixed approximately 400mm from the ground and attached at either end using 2 x 100mm Frame Screws (FIX 1) driving through the Curved Beam (A) and into the Horizontal Beam (B); in some instances you will have no room to drive directly through the curved beam so we suggest angling the screws slightly from above/below.

Please Note: The Horizontal Beams (B) should be orientated so that the wider face of the timber is facing up/downwards.

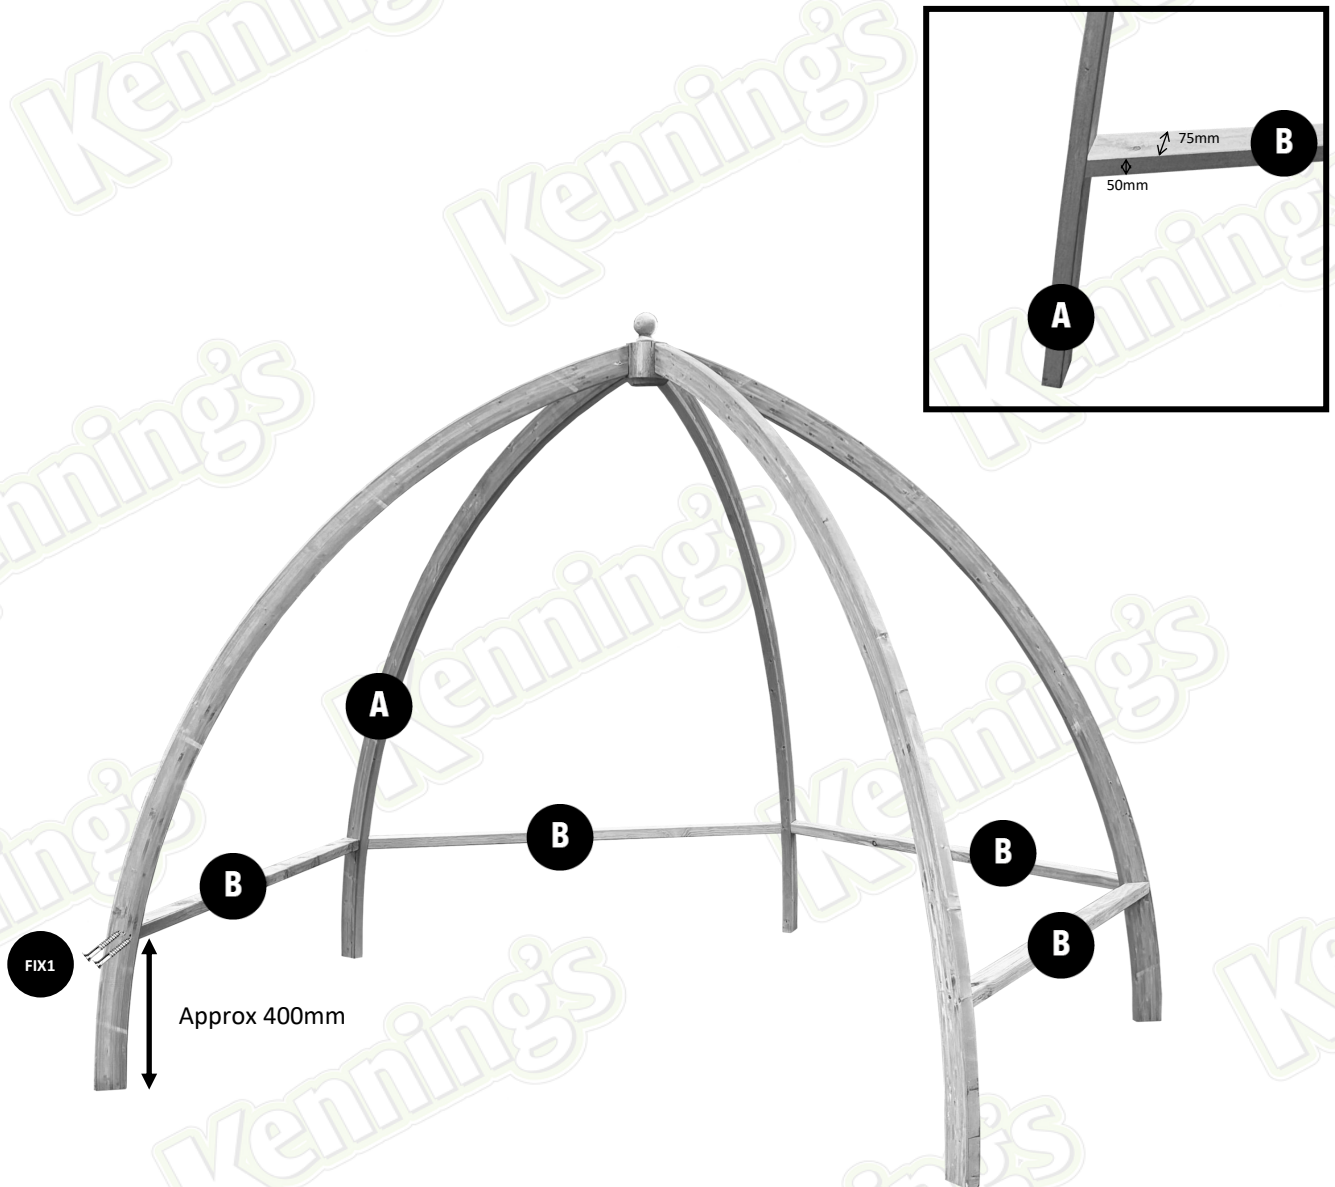

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 6 of 7

Zen Pergola (W 3600mm x H 2350mm)

Kennings



Enjoy your new Zen Pergola!

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 7 of 7